

Installation Instructions: Courtyard Series Stake Mounted Pathlights

1. Locate the area(s) where the Pathlight(s) will be placed.
2. If the Pathlights are being mounted to existing concrete or a hard surface then a 2x2 Brass Surface Mount Base will be needed (see website for details).
3. Using a 7/2" Pencil-Point Digging Bar dig a 6-8" deep hole using the pointed end of the Digging Bar for the ABS Ground Stake on the Pathlight(s).
4. Place the Top Cap of the Pathlight onto the Pathlight. Then tighten the hex head screw so that the Top Cap is securely fastened to the top of the Pathlight (see Figure B).
5. Once the Top Cap has been secured to the Pathlight thread the ABS Ground Stake onto the base of the Pathlight (see Figure C).

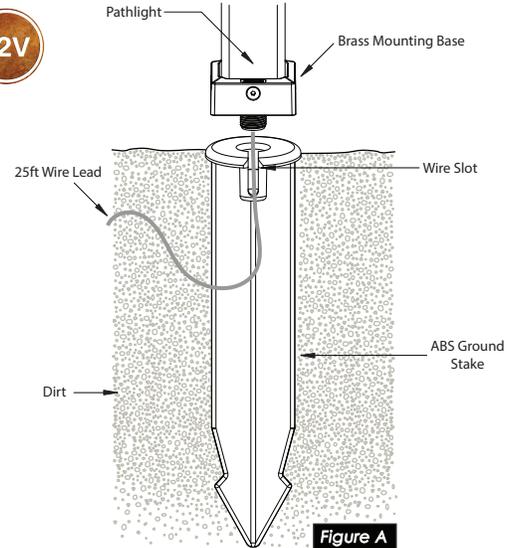


Figure A

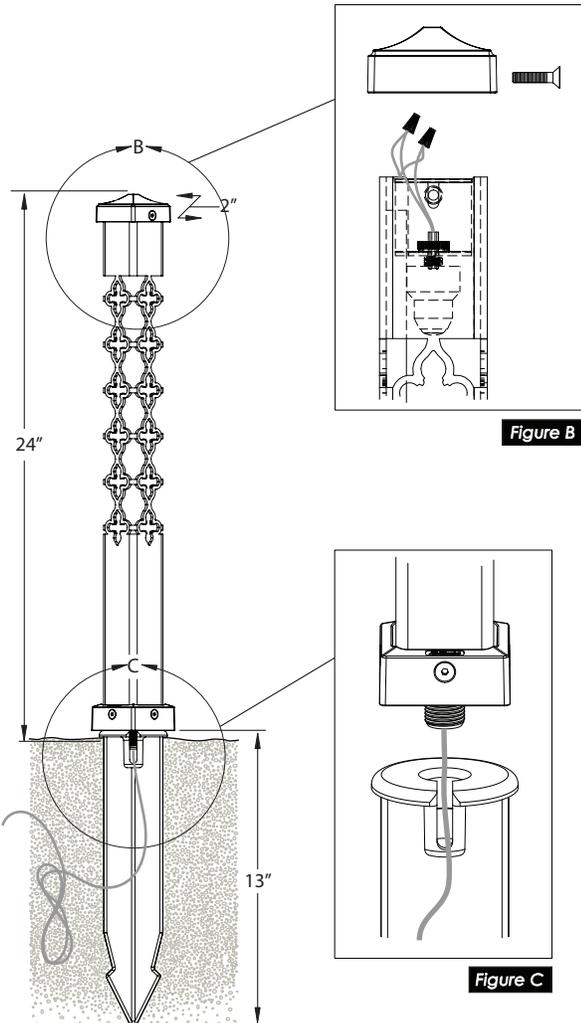


Figure B

Figure C

6. Place the Pathlight into the 6-8" hole. Press the Pathlight firmly into the hole (see Figure A). Note: Depending on what region you are located the installation process can vary (visit our YouTube channel for installation videos).
7. Once the Pathlight is in the desired position, tamp the soil around the ABS Ground Stake to ensure that the Pathlight is firmly placed in the soil/landscape.
8. **Make sure to leave approximately 24" of lead wire by the Pathlight buried 6-8" below the soil grade for future service work to be performed and/or if the fixture needs to be moved due to surrounding plant growth.**
9. Connect the lead wire from the Pathlight to the power supply line using lithium grease filled wire nuts.
10. **Note: Light Glare can be reduced with the Adjustable LED Holder by adjusting the knob on the top of the Socket Holder Bracket of the Pathlight** (visit our YouTube channel for installation videos).

